

## Коды ошибок трансмиссия P07XX-P08XX

Написано Administrator  
10.05.2009 19:13

---

P0700 Неисправность системы контроля трансмиссии  
P0701 Система контроля трансмиссии вне допустимого диапазона  
P0702 Transmission Control System Electrical  
P0703 Torque Converter/Brake Switch B Circuit Malfunction  
P0704 Clutch Switch Input Circuit Malfunction  
P0705 Transmission Range Sensor Circuit malfunction (PRNDL Input)  
P0706 Transmission Range Sensor Circuit Range/Performance  
P0707 Transmission Range Sensor Circuit Low Input  
P0708 Transmission Range Sensor Circuit High Input  
P0709 Transmission Range Sensor Circuit Intermittent  
P0710 Transmission Fluid Temperature Sensor Circuit Malfunction  
P0711 Transmission Fluid Temperature Sensor Circuit Range/Performance  
P0712 Transmission Fluid Temperature Sensor Circuit Low Input  
P0713 Transmission Fluid Temperature Sensor Circuit High Input  
P0714 Transmission Fluid Temperature Sensor Circuit Intermittent  
P0715 Input/Turbine Speed Sensor Circuit Malfunction  
P0716 Input/Turbine Speed Sensor Circuit Range/Performance  
P0717 Input/Turbine Speed Sensor Circuit No Signal  
P0718 Input/Turbine Speed Sensor Circuit Intermittent  
P0719 Torque Converter/Brake Switch B Circuit Low  
P0720 Output Speed Sensor Circuit Malfunction  
P0721 Output Speed Sensor Range/Performance  
P0722 Output Speed Sensor No Signal  
P0723 Output Speed Sensor Intermittent  
P0724 Torque Converter/Brake Switch B Circuit High  
P0725 Engine Speed input Circuit Malfunction  
P0726 Engine Speed Input Circuit Range/Performance  
P0727 Engine Speed Input Circuit No Signal  
P0728 Engine Speed Input Circuit Intermittent  
P0730 Incorrect Gear Ratio  
P0731 Gear 1 Incorrect ratio  
P0732 Gear 2 Incorrect ratio  
P0733 Gear 3 Incorrect ratio  
P0734 Gear 4 Incorrect ratio  
P0735 Gear 5 Incorrect ratio  
P0736 Reverse incorrect gear ratio  
P0740 Torque Converter Clutch Circuit Malfunction  
P0741 Torque Converter Clutch Circuit Performance or Stuck Off  
P0742 Torque Converter Clutch Circuit Stuck On  
P0743 Torque Converter Clutch Circuit Electrical  
P0744 Torque Converter Clutch Circuit Intermittent  
P0745 Pressure Control Solenoid Malfunction  
P0746 Pressure Control Solenoid Performance or Stuck Off  
P0747 Pressure Control Solenoid Stuck On

## Коды ошибок трансмиссия P07XX-P08XX

Написано Administrator  
10.05.2009 19:13

---

P0748 Pressure Control Solenoid Electrical  
P0749 Pressure Control Solenoid Intermittent  
P0750 Shift Solenoid A MalfunctionP  
P0751 Shift Solenoid A PerformanceP or Stuck Off  
P0752 Shift Solenoid A Stuck On  
P0753 Shift Solenoid A ElectricalPI  
P0754 Shift Solenoid A IntermittPent  
P0755 Shift Solenoid B Malfunction  
P0756 Shift Solenoid B Performance or Stuck Off  
P0757 Shift Solenoid B Stuck On  
P0758 Shift Solenoid B Electrical  
P0759 Shift Solenoid B Intermittent  
P0760 Shift Solenoid C Malfunction  
P0761 Shift Solenoid C Performance or Stuck Off  
P0762 Shift Solenoid C Stuck On  
P0763 Shift Solenoid C Electrical  
P0764 Shift Solenoid C Intermittent  
P0765 Shift Solenoid D Malfunction  
P0766 Shift Solenoid D Performance or Stuck Off  
P0767 Shift Solenoid D Stuck On  
P0768 Shift Solenoid D Electrical  
P0769 Shift Solenoid D Intermittent  
P0770 Shift Solenoid E Malfunction  
P0771 Shift Solenoid E Performance or Stuck Off  
P0772 Shift Solenoid E Stuck On  
P0773 Shift Solenoid E Electrical  
P0774 Shift Solenoid E Intermittent  
P0780 Shift Malfunction  
P0781 1-2 Shift Malfunction  
P0782 2-3 Shift Malfunction  
P0783 3-4 Shift Malfunction  
P0784 4-5 Shift Malfunction  
P0785 Shift/Timing Solenoid Malfunction  
P0786 Shift/Timing Solenoid Range/Performance  
P0787 Shift/Timing Solenoid Low  
P0788 Shift/Timing Solenoid High  
P0789 Shift/Timing Solenoid Intermittent  
P0790 Normal/Performance Switch Circuit Malfunction  
P0801 Reverse Inhibit Control Circuit Malfunction  
P0803 1-4 Upshift (Skip Shift) Solenoid Control Circuit Malfunction  
P0804 1-4 Upshift (Skip Shift) Lamp Control Circuit Malfunction